fire kloud

AEROSOL
REVOLUTION
TECHNOLOGY



FKa 20 R

Installation sheet

Installation, assembly and connection instructions

RINA P0019412/1 | UNI EN 15276 ISO 15779 | SIL 3 IEC 61508 | 15 YEARS Certified product life

Rev. 01 EN 02/2024

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. **www.firekloud.it**

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001

FKa 20 R


Installation, assembly and connection sheet

fire kloud AEROSOL REVOLUTION TECHNOLOGY


Package contents

- Aerosol generator mod. FKa 20 R.
- Fixing bracket.
- 2 lock washers and 2 M6 Allen screws.
- Fire resistant connection cable in compliance with CEI 20105V2 EN50200 PH30 2x1 sq. mm L=150 cm provided with a circular connector.
- Identifying label.
- Installation, assembly and connection sheet.


Dimensional specifications FKa 20 R

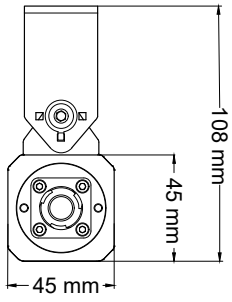


frontal view

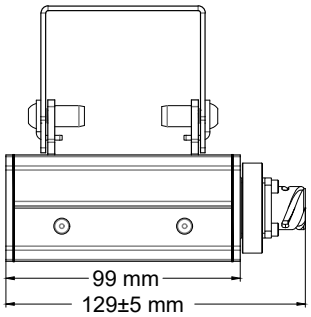

side view




bottom view

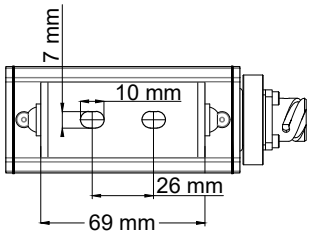


top view

Generator discharge features

Before positioning the generator, check that it is compatible with the discharge range and that safety distances are observed (for details see the installation and operation manual).

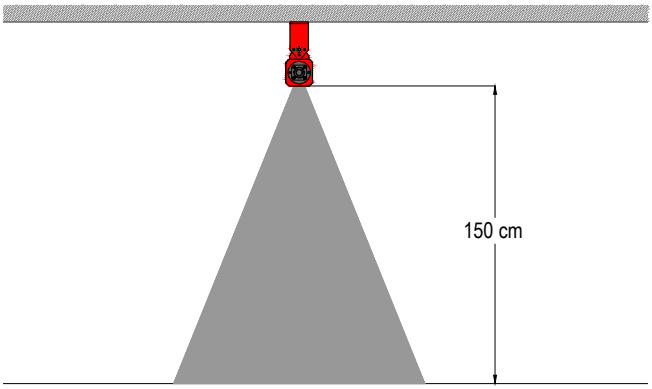

Flow direction and range during discharge

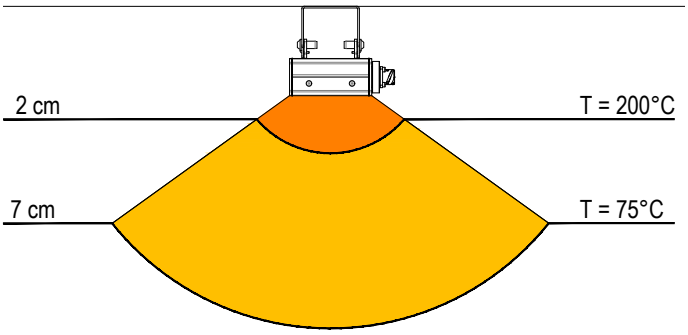

Flow temperatures during discharge

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001


FKa 20 R

Installation, assembly and connection sheet


fire kloud AEROSOL REVOLUTION TECHNOLOGY

Connection procedures

- Before connecting the generators, read the installation and operation manual carefully.
- The connection procedures must be done after the generator has been positioned and fixed.
- Fire Kloud aerosol generators must be connected only after the system has been commissioned and tested (see the installation and operation manual).
- During the installation, consider the overall dimensions, with paired connectors, of the connection cable with the generator [> 80 mm].

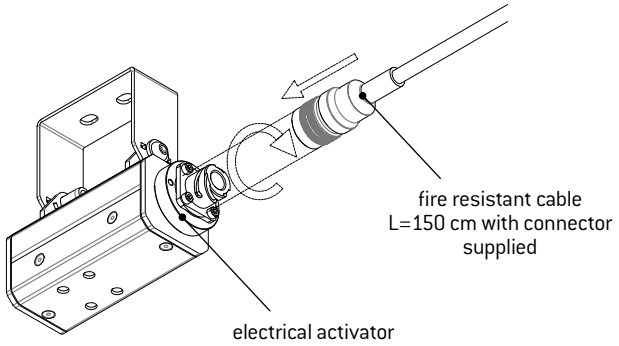


Bracket mounting instructions

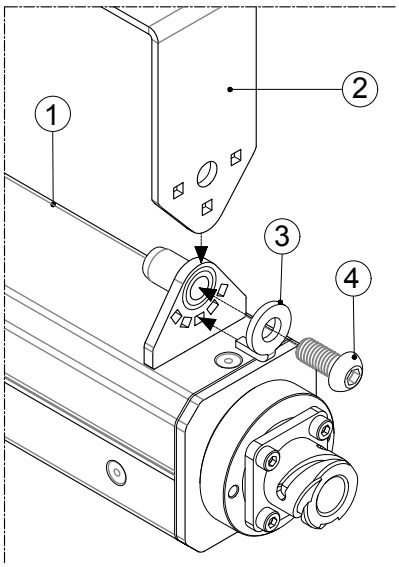

1 AEROSOL GENERATOR
2 BRACKET
3 LOCKING WASHER
4 M6 ALLEN SCREW



INSTALLATION FLEXIBILITY

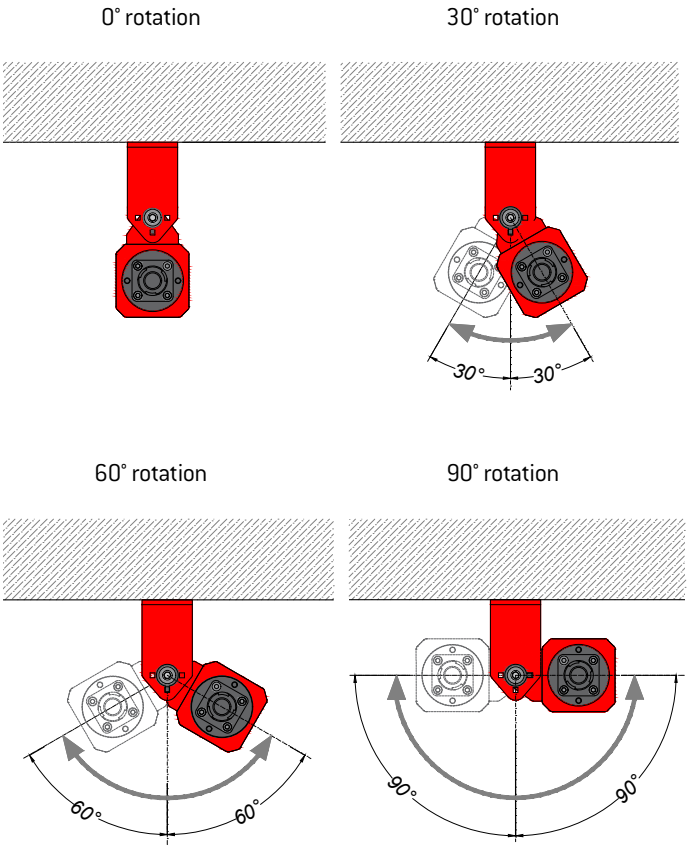

IDENTIFYING LABEL



The label is used to identify the exact position of the generators hidden in the false ceiling and underfloor, it must be applied on the floating floor or on the false ceiling in the same place as the generator in order to facilitate maintenance operations.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY

Member of CISQ Federation
RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001

FKa 20 R

Installation, assembly and connection sheet


fire kloud AEROSOL REVOLUTION TECHNOLOGY

Anchoring and fixing modes


The fixing plug for the generator must be chosen according to the characteristics of the support and must guarantee secure anchorage during the operation of the generator.

INSTALLATION IN FALSE CEILING

on the wall

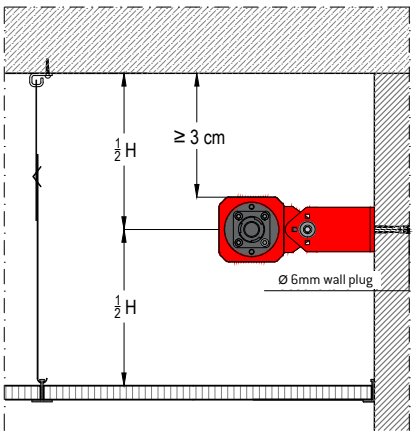


on the ceiling rotated by 90°

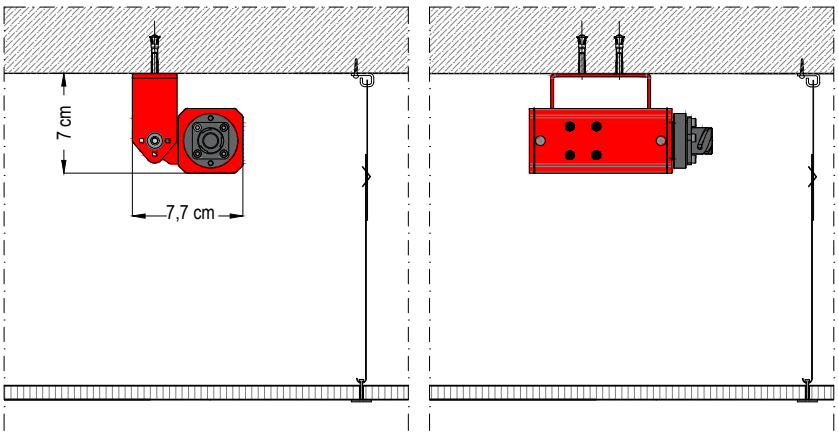


UNDERFLOOR INSTALLATION

on the wall

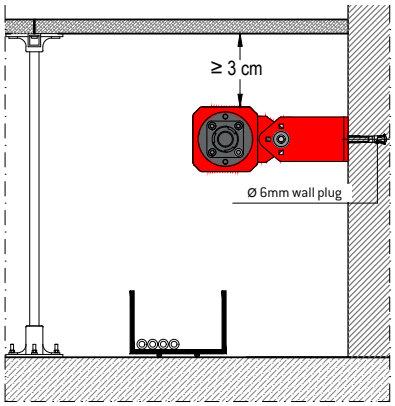

on the floor rotated by 90°

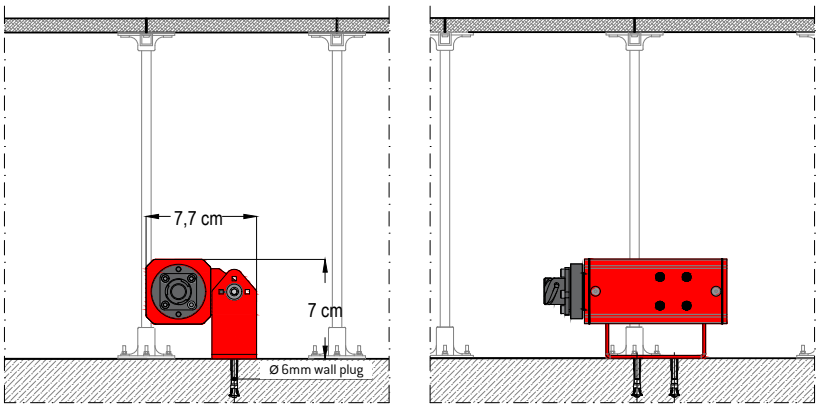

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. **www.firekloud.it**

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001

FKa 20 R

Installation, assembly and connection sheet


fire kloud AEROSOL REVOLUTION TECHNOLOGY

Installation in false ceiling/underfloor


Position the generators on the perimeter and/or in the centre as shown in the figure, being sure that the flow is not obstructed by obstacles such as electrical conduits and/or air ducts.

EXAMPLES OF FALSE CEILING AND UNDERFLOOR INSTALLATION


spaces wider than 1,5 metres

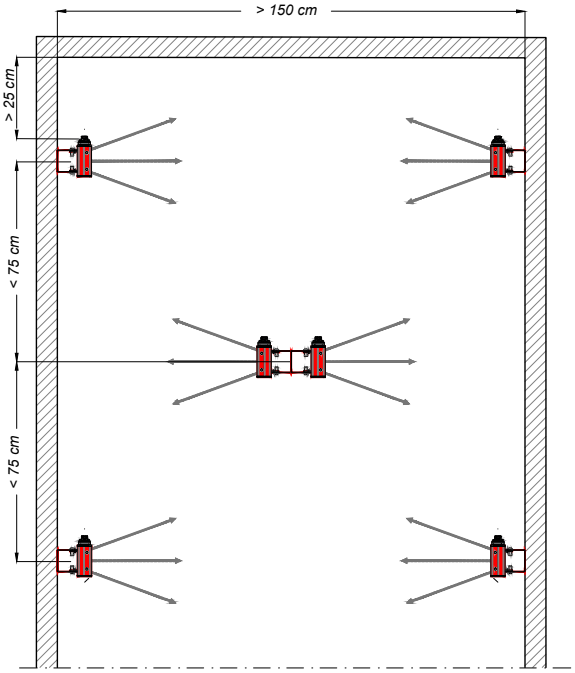



spaces less than 1,5 metres wide

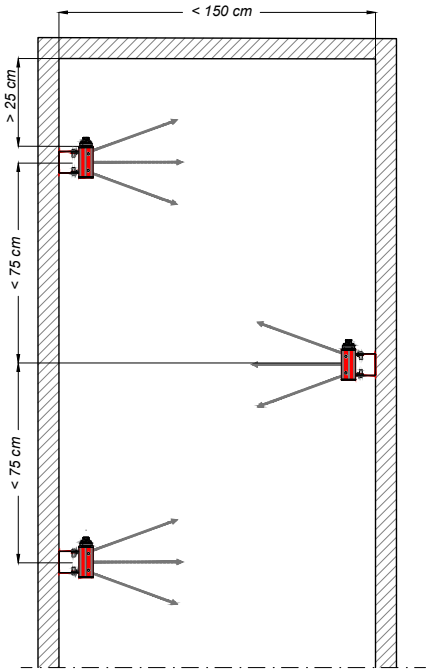


incorrect installation

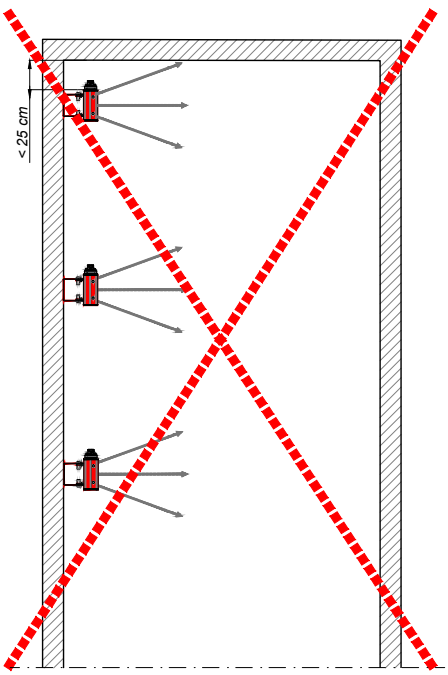

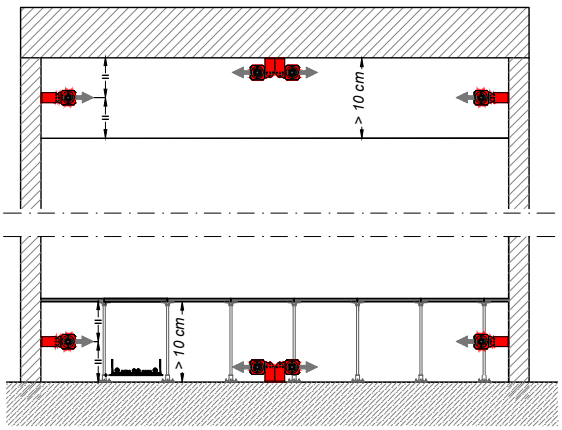

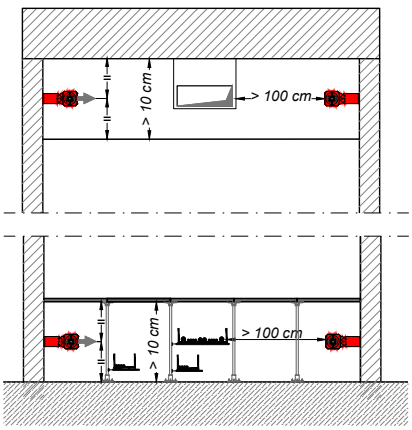

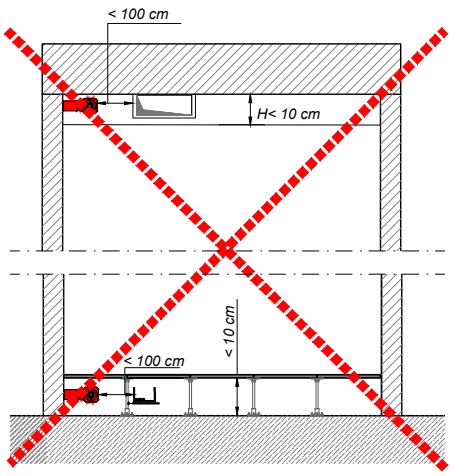

ADVICE FOR A CORRECT INSTALLATION

- The generators must be distributed evenly in the room, following the design and the indications given below. For further information see the installation and operation manual.
- Due to the high temperature of the generator after the discharge, make sure that the metal casing is not in contact with objects or other things (pipes, lighting fixtures, cable ducts, etc.).
- Ensure that the direction of discharge is respected, that the flow comes out freely and that there are no objects or other things that obstruct and/or are hit at distances shorter than the safety distance.
- Make sure that the discharge range of the aerosol generator is suitable for the size of the protected area.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001