fire kloud

AEROSOL
REVOLUTION
TECHNOLOGY



FKa 400 RT

Installation sheet

Installation, assembly and connection instructions

UNI EN 15276
ISO 15779
15 YEARS
Certified product life

Rev. 02 EN 10/2025

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. **www.firekloud.it**

MADE IN ITALY

Member of CISQ Federation
RINA
CERTIFIED MANAGEMENT SYSTEM
ISO 9001

FKa 400 RT


Installation, assembly and connection sheet

fire kloud AEROSOL REVOLUTION TECHNOLOGY


Package contents

- Aerosol generator mod. FKa 400 RT.
- Fixing bracket.
- 2 lock washers and 2 M8 Allen screws.
- Identifying label.
- Installation, assembly and connection sheet.
- Connection cable to interconnect multiple aerosol generators L=2m.
- 2 four-pole terminal blocks.
- QR code label.


Dimensional specifications FKa 400 RT

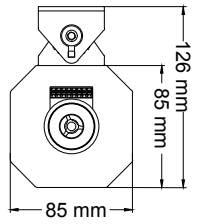


front view

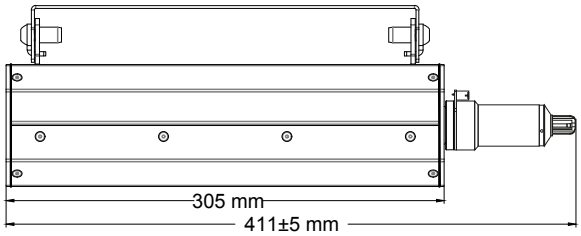

side view

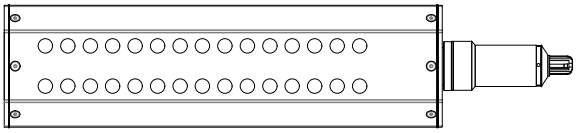


bottom view

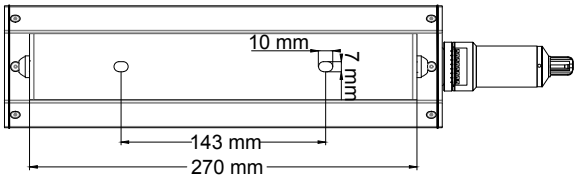


top view

Generator discharge features

Before positioning the generator, check that it is compatible with the discharge range and that safety distances are observed (for details see the installation and operation manual).

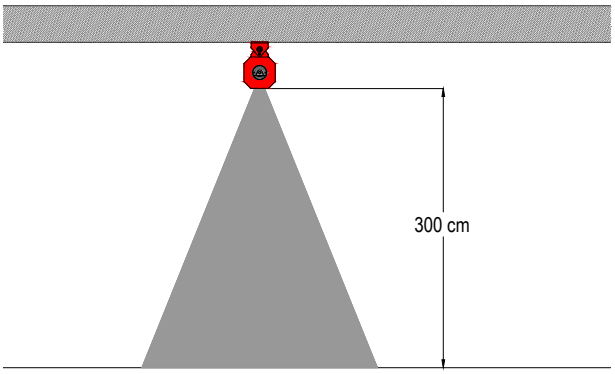

Flow direction and range during discharge

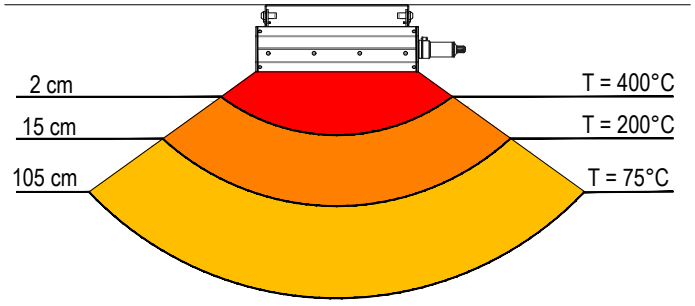

Flow temperatures during discharge

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001


FKa 400 RT


Installation, assembly and connection sheet

fire kloud AEROSOL REVOLUTION TECHNOLOGY

Connection procedures

- Before connecting the generators, read the T-Kloud installation and operation manual carefully.
- Once all components have been secured and connected, and after performing the system function tests, remove the safety pin.

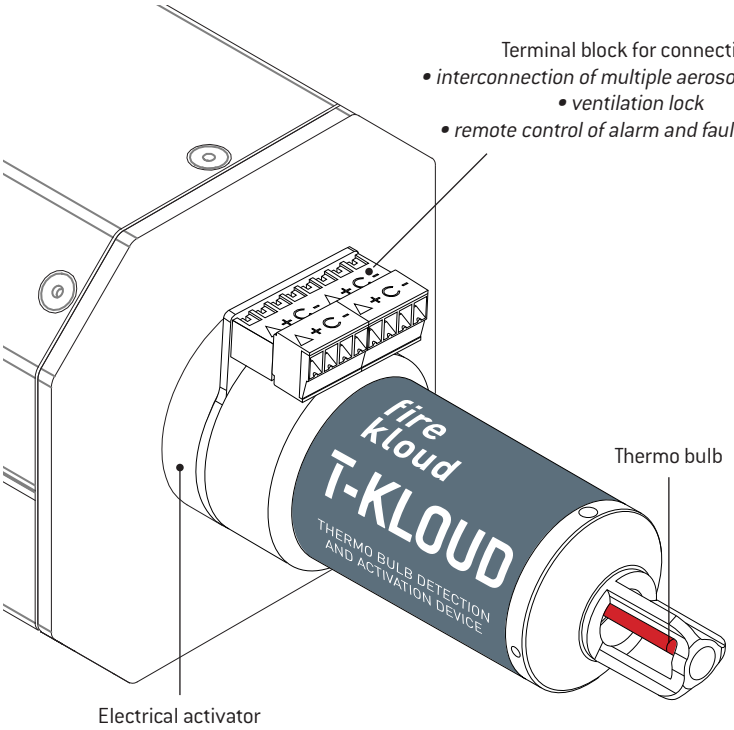


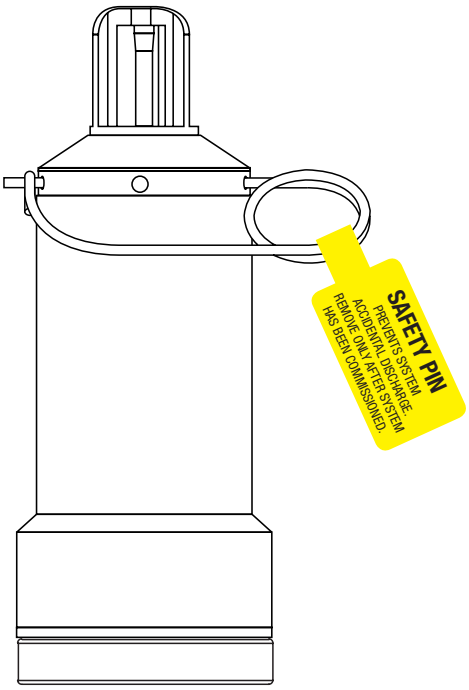


Anchoring and fixing modes

The fixing plug for the generator must be chosen according to the characteristics of the support and must guarantee secure anchorage during the operation of the generator.


at the top centre of the compartment

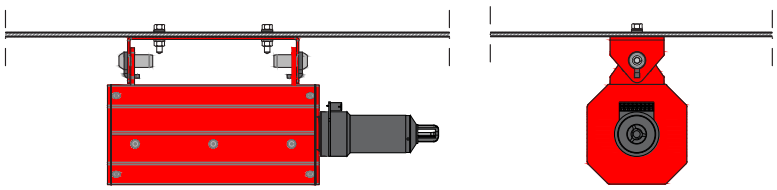


at the top rotated by 30°

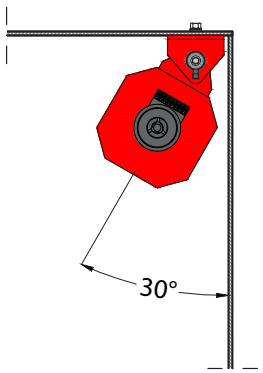

laterally rotated by 30°

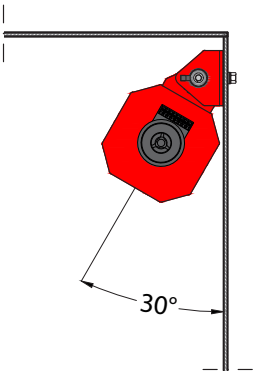

fixing detail

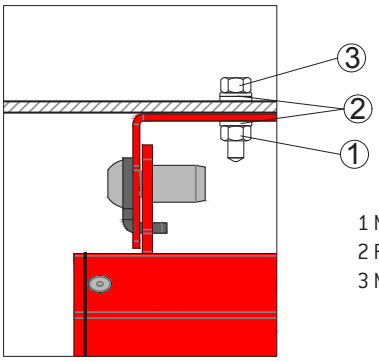

1 M8 NUT
2 FLAT WASHER
3 M8 BOLT

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY


Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001

FKa 400 RT

Installation, assembly and connection sheet


fire kloud AEROSOL REVOLUTION TECHNOLOGY

Bracket mounting instructions

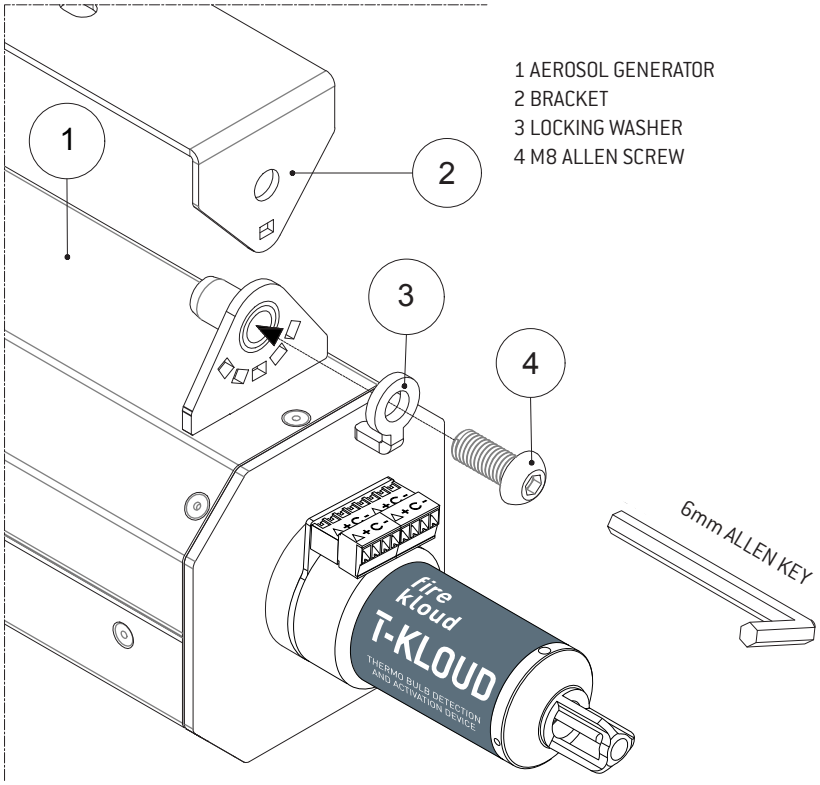

1 AEROSOL GENERATOR
2 BRACKET
3 LOCKING WASHER
4 M8 ALLEN SCREW


INSTALLATION FLEXIBILITY

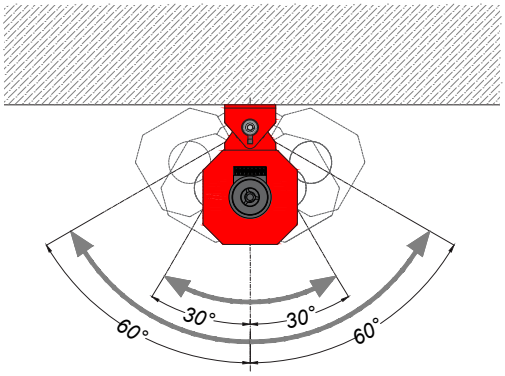

IDENTIFYING LABEL



The QR code contains the model, the serial number, the production date, the expiry date, the drawing, the technical data sheet and the installation instructions of the generator.

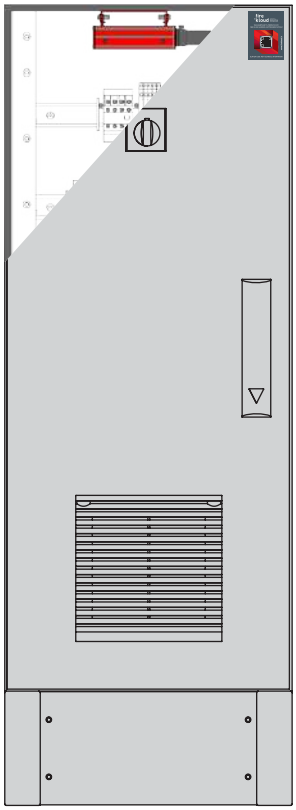

Apply the identification label to the outside of the electrical panel in a clearly visible position (e.g., on the outside of the door) and complete it with the QR code label in the indicated position.

For systems with multiple generators, apply the label to each door of the panel.

WARNINGS

The expiry date of the aerosol generator is 15 years, while for the T-Kloud it is 10 years from the date of manufacture.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. **www.firekloud.it**

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001

FKa 400 RT


Installation, assembly and connection sheet

fire kloud AEROSOL REVOLUTION TECHNOLOGY


Installation in machinery, engine compartments and electrical equipment

EXAMPLES OF INSTALLATION IN ELECTRICAL GENERATORS


longitudinal section

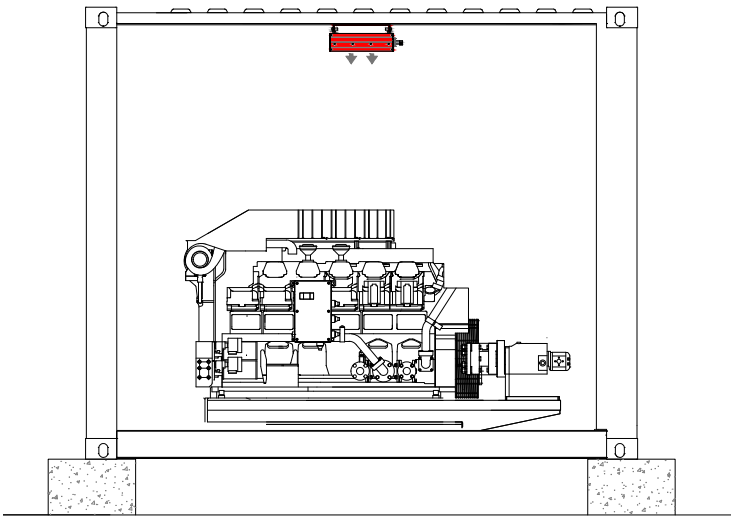

cross section

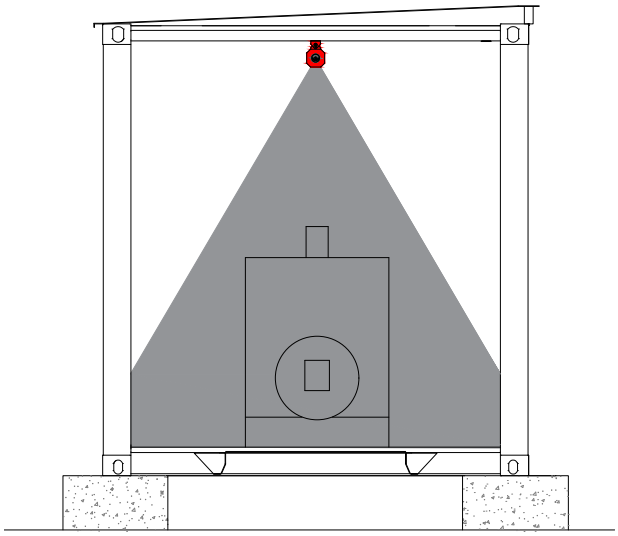

plan

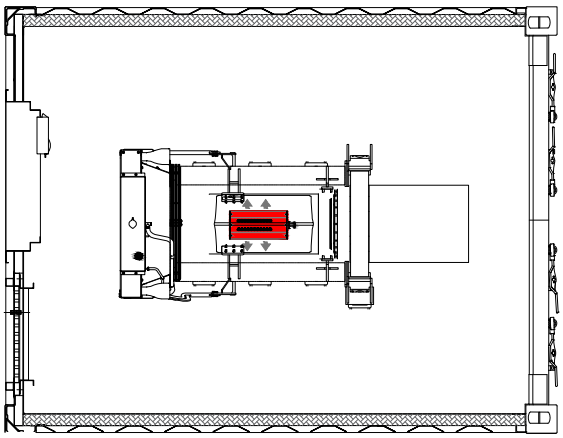

INSTALLATION ADVICE IN ENGINE COMPARTMENTS

- The generators must be installed as described in the following points, and in any case in a number and position that guarantee an even distribution and a correct concentration;
- The generator must be installed in accordance with the manufacturer's instructions and in compliance with the safety distances;
- Position the generator at the top of the protected compartment with the fusible detector pointing downwards as shown in the drawings;
- Direct the flow in the direction of the potential fire start;
- Position the aerosol generators with the flow above the engine at the points of greatest fire risk;
- Due to the high temperature of the generator after the discharge, make sure that the metal casing is not in contact with objects or other things (switches, cables, conduits, etc.);
- Ensure that there are no objects or things involved at distances shorter than the safety distance (recommended distance from the flow ≥15 cm);
- For a correct distribution of the aerosol, make sure that the direction of delivery is respected and that the flow comes out freely (recommended distance from the flow of any obstacles ≥60 cm);
- The anchorage of the generator must be chosen according to the characteristics of the support.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY

Member of CISQ Federation
RINA
CERTIFIED MANAGEMENT SYSTEM
ISO 9001


FKa 400 RT

Installation, assembly and connection sheet


fire kloud AEROSOL REVOLUTION TECHNOLOGY

EXAMPLES OF INSTALLATION IN MACHINERY AND TECHNICAL ROOMS


longitudinal section

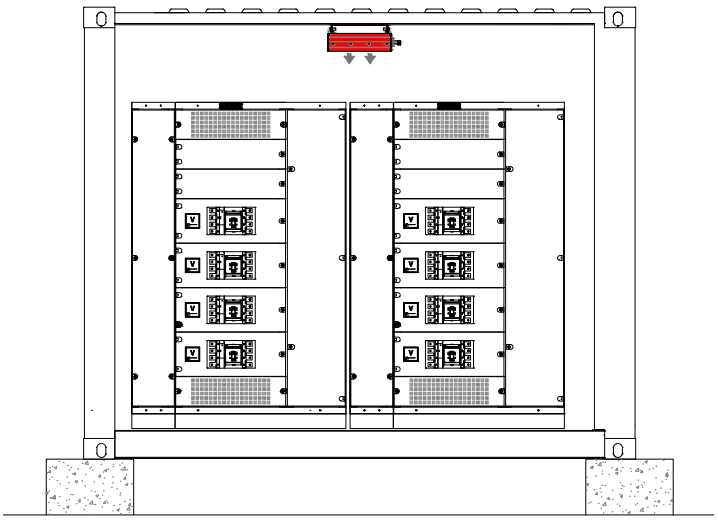

cross section

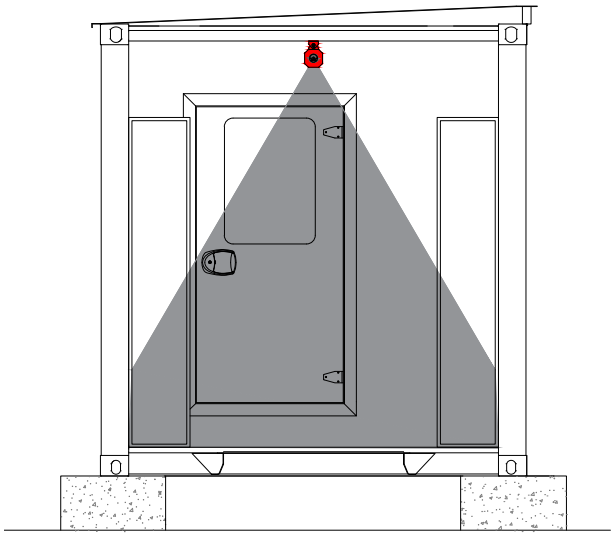

plan

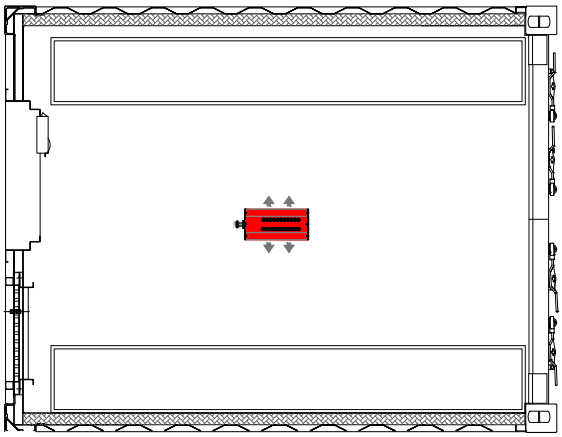

INSTALLATION ADVICE FOR MACHINERY AND TECHNICAL ROOMS

- The generators must be installed as described in the following points, and in any case in a number and position that guarantee an even distribution and a correct concentration;
- The generator must be installed in accordance with the manufacturer's instructions and in compliance with the safety distances;
- Position the generator at the top of the protected compartment with the fuse detector pointing downwards as shown in the drawings;
- Direct the flow in the direction of the potential fire start;
- Due to the high temperature of the generator after the discharge, make sure that the metal casing is not in contact with objects or other things (switches, cables, conduits, etc.);
- Ensure that there are no objects or things involved at distances shorter than the safety distance (recommended distance from the flow ≥15 cm);
- For a correct distribution of the aerosol, make sure that the direction of delivery is respected and that the flow comes out freely (recommended distance from the flow of any obstacles ≥60 cm);
- The anchorage of the generator must be chosen according to the characteristics of the support.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. **www.firekloud.it**

MADE IN ITALY

Member of CISQ Federation
RINA
CERTIFIED MANAGEMENT SYSTEM
ISO 9001


FKa 400 RT

Installation, assembly and connection sheet

fire kloud AEROSOL REVOLUTION TECHNOLOGY

Connections


STAND-ALONE VERSION WITHOUT REMOTE CONTROL

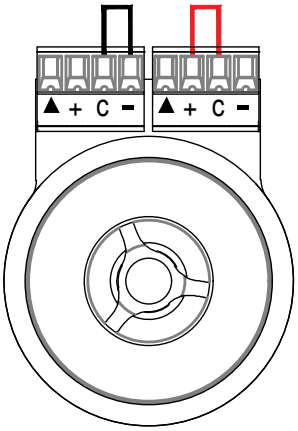

To guarantee the correct operation of the system, pay attention to the connection of the terminal blocks.

Connect the supplied terminal blocks, complete with closing jumpers, to the terminal block on the T-Kloud body. Respect the colours of the jumpers as shown in the figure.

CONNECTION UP TO 8 GENERATORS WITHOUT REMOTE CONTROL

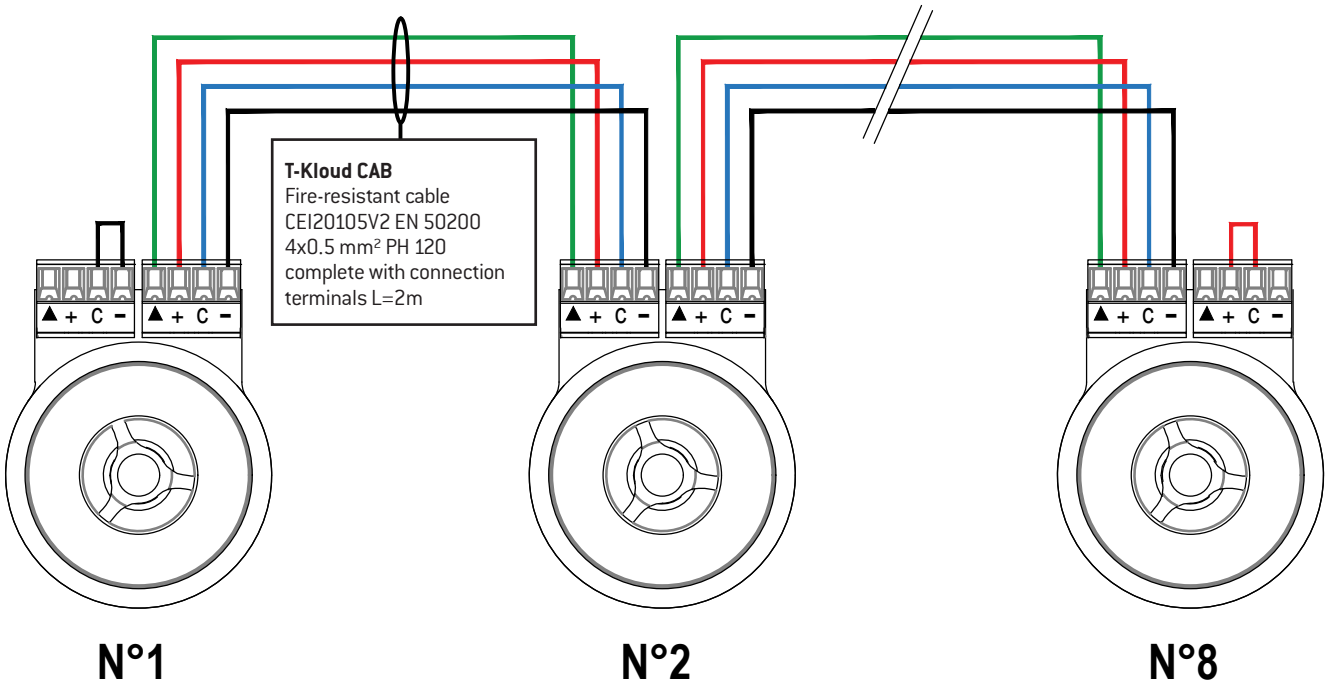

To connect multiple aerosol generators equipped with the T-Kloud device:

- connect the connection terminals respecting the colours of the circuit closure jumpers on the first and last generators in the series;
- connect the generators to each other using the supplied T-Kloud CAB cable as shown in the diagram.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001

FKa 400 RT


Installation, assembly and connection sheet

fire kloud AEROSOL REVOLUTION TECHNOLOGY

Connections


REMOTE ALARM AND FAULT MONITORING

T-Kloud remote connection diagram with support terminal block

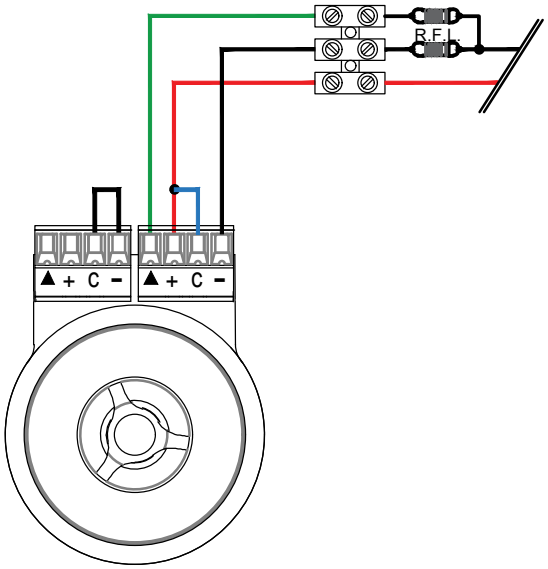

remote alarm and fault transmission to IRAI control unit and/or I/O module

T-Kloud remote connection diagram without support terminal block

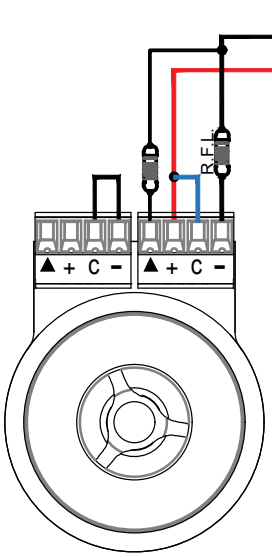

remote alarm and fault transmission to IRAI control unit and/or I/O module

The device has a NO contact to indicate the alarm status and allows fault status monitoring. Alarm and fault statuses can be remotely controlled directly on the connection terminal block of the first T-Kloud device in the series, or using a support terminal block inside the protected electrical equipment.

Connection in the event of remote alarm and fault status:

- remove the red jumper;
- connect the cable coming from an I/O module or from an IRAI control unit zone;
- cable the end-of-line and load resistors required by the IRAI control unit as shown in the diagram.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. **www.firekloud.it**

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001


FKa 400 RT

Installation, assembly and connection sheet

fire kloud AEROSOL REVOLUTION TECHNOLOGY


Connections

REMOTE ALARM, FAULT AND VENTILATION LOCK

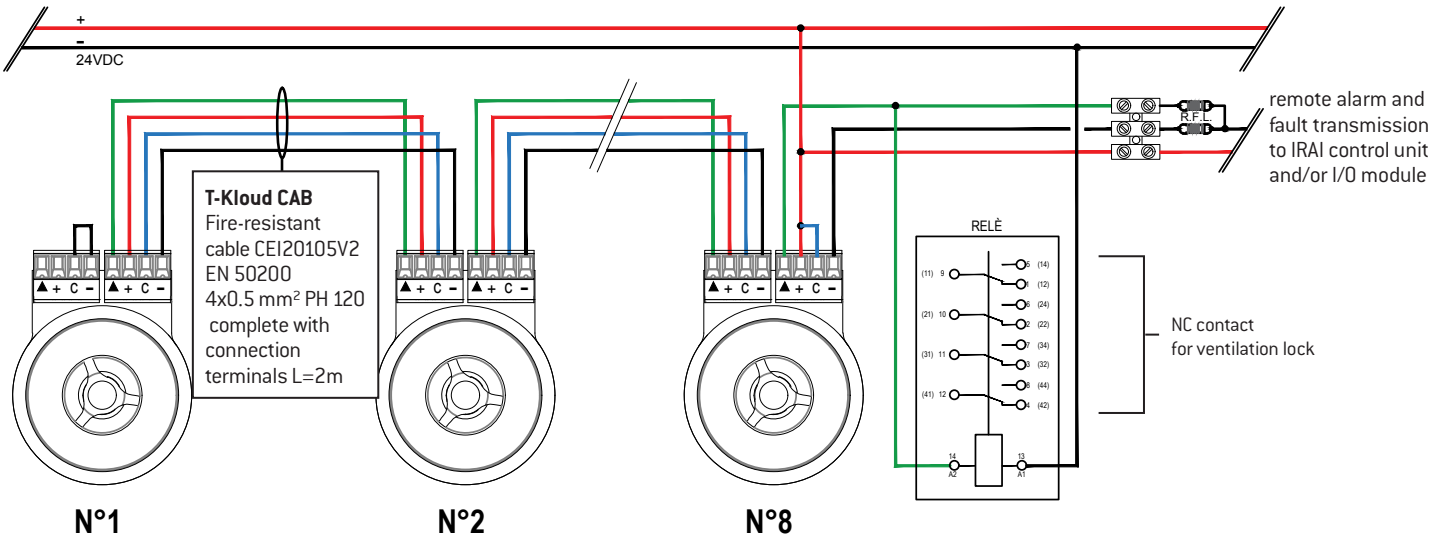

In the event that the alarm and fault statuses need to be remote controlled and the ventilation of the protected device needs to be locked at the same time, it will be necessary to use an external relay with 4 changeover contacts and connect the fan power supply to the NC contact of the relay. Follow the diagram for cabling.

CONNECTION FOR VENTILATION LOCK

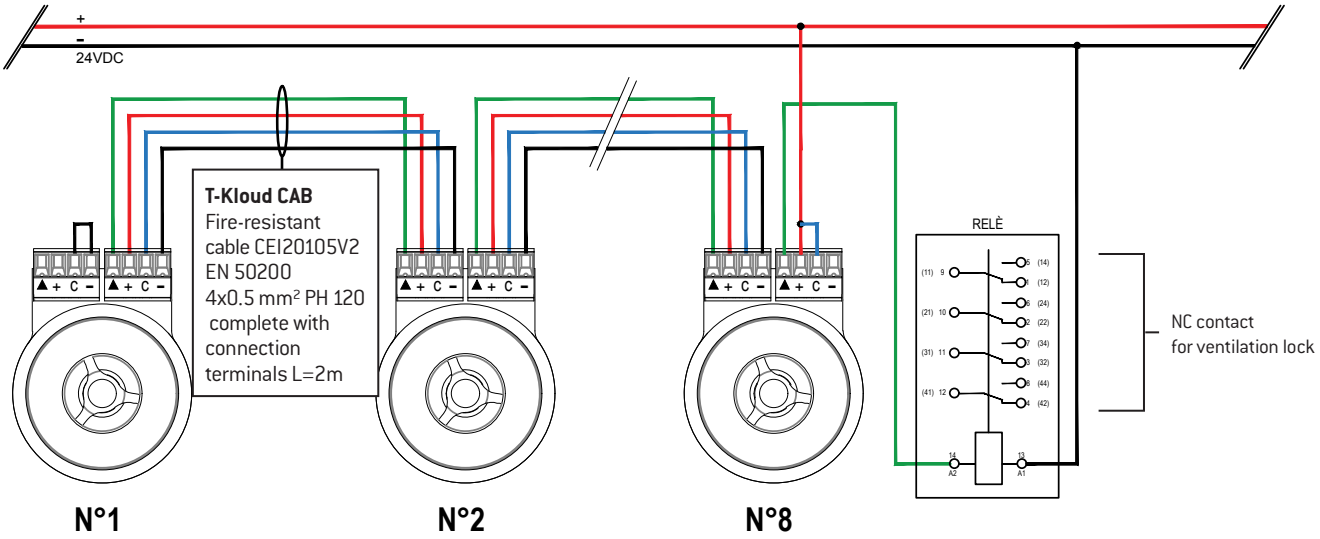

If you wish to lock the ventilation of the protected device, you will need to use an external relay with 4 changeover contacts and connect the fan power supply to the NC contact of the relay. Follow the diagram for cabling.

FIREX TECNOLOGIE ANTINCENDIO

Fir.Ex. S.r.l.
Via delle Centurie, 3/5 - 03100 Frosinone
t +39 0775 1530692 r.a. www.firekloud.it

MADE IN ITALY

Member of CISQ Federation RINA CERTIFIED MANAGEMENT SYSTEM ISO 9001